

FS 700 EX

Reservdelar

Spare parts

Ersatzteile

Pieces de rechange

Piezas de repuesto

Ricambi


Peças sobresselente

No.	Pos.	Description	No.	Pos.	Description
501 35 83-01	A	Blade guard unass. FS 700	531 11 73-16	M	Feedingmotor
501 35 86-01	G	Hose carrier	531 11 73-23	N	Feedingmotor
501 35 89-01	C	Electric motor 400-480V	531 11 73-27	N	Kable fitting
501 35 89-02	C	Electric motor 575-600V	531 11 73-28	N	Distance M5x35
501 35 89-03	C	Electric motor 200V	531 11 73-29	L	Lamp
501 35 90-01	G	Holder of hose carrier	531 11 73-42	P	Softstart 480V
501 35 94-01	Q	Chassis	531 11 73-48	P	Contactora
501 35 95-01	Q	Back cover 5-pin	531 11 73-68	L	Emergency stop
501 35 96-01	F	Cutting bridge	531 11 73-88	P	Contactora 600V
501 35 97-01	D	Front handle	531 11 73-89	P	Softstart 600V
501 35 98-01	F	Housing	531 11 73-92	L	Main switch 400V
501 35 99-01	D	Support flange left	531 11 73-93	C	Cable 7x2,5+2x0,75
501 36 03-01	D	Support flange right	531 11 73-94	CQ	Cable fitting M25
501 36 04-01	G	Carrier bracket right	531 11 73-96	P	Cable fitting M25
501 36 05-01	G	Carrier bracket left	531 11 73-97	P	Nut M25
501 36 06-01	C	Motor bracket, left	531 11 73-98	Q	Adaptor
501 36 07-01	C	Motor bracket, Right	531 11 73-99	C	Reducing M32-M25
501 36 08-01	D	Base plate 700	531 11 74-00	P	Current metering transformer
501 36 46-01	M	Wheel guard right	531 11 74-02	L	Main switch 200V
501 36 47-01	M	Wheel guard left	531 11 74-05	P	Y-D starter
501 36 52-01	Q	Back cover 4-pin	531 11 74-15	L	Lamp red
501 36 52-02	Q	Back cover 600V	531 11 80-03	JQ	Quick coupling, female 1800 uv
504 00 82-01	Q	Type plate	531 11 80-04	J	Hose nipple
504 00 95-01	A	Blade guard FS 700	531 11 80-05	JLQ	Nipple 1812
504 02 91-07	Q	Label Husqvarna	531 11 83-02	L	Angle coupling 3/8"
504 02 99-02	Q	Label FS 700 EX	531 11 83-08	L	Ball valve mini 3/8"
531 11 23-12	P	Electric box 480V complete	531 11 83-18	JLQ	Waterhose black 1/2
531 11 23-18	P	Transformer 400V	531 11 83-48	J	Muff 3/8"
531 11 23-19	P	Transformer 480V	531 11 83-55	D	Nipple 18210
531 11 23-22	K	Potentiometer with cable left	531 11 90-14	JLQ	Hose clamp 13-20
531 11 23-23	K	Potentiometer with cable right	531 11 90-16	P	Pop-nut
531 11 23-24	C	Motorcontact with cable	531 11 90-18	P	Spacer
531 11 23-25	K	Cable left	531 11 90-24	P	Nut
531 11 23-26	K	Cable right	531 11 90-83	N	Bearing washer AS 2035
531 11 23-32	D	Flush flange cpl.60mm 85/89-M8	531 11 90-85	N	Bearing AXK 2035
531 11 23-34	P	Electric box 600V complete	531 11 91-05	N	Ball 5 mm
531 11 23-35	P	Transformer 600V	531 11 91-50	N	Bearing
531 11 23-37	P	Electric box 400V complete	531 11 91-65	AM	Blind rivet 4x12 st/st
531 11 23-45	D	Flange cpl. 60mm 85-M8, 90-M10	531 11 91-77	F	Shaft seal 25x35x7
531 11 23-46	P	Electric box 200V complete	531 11 91-81	CGH	Washer 10.5x22
531 11 23-47	P	Transformer 200V	531 11 91-83	ACDFQ	Washer 13x24x2
531 11 23-51	D	Flush flange complete 1", 90-M8	531 11 91-97	G	Screw M6S 10x16
531 11 23-56	D	Blade shaft	531 11 91-98	N	Screw M6S 10x25
531 11 23-57	N	Cable to depth motor	531 11 92-00	C	Screw M6S 10x35
531 11 70-10	J	Extention socket 200V	531 11 92-02	A	Screw M6S 12x25
531 11 70-46	N	Cable clip	531 11 92-03	BQ	Screw M6S 12x30
531 11 70-47	N	Cable lug	531 11 92-07	A	Screw M6S 12x45
531 11 70-62	P	Cable grommet	531 11 92-10	P	Screw M6S 6x12
531 11 70-74	P	Over current relay	531 11 92-11	BLM	Screw M6S 6x16
531 11 70-96	K	Potentiometer	531 11 92-12	M	Screw M6S 6x20
531 11 71-50	J	Electric inlet 200V	531 11 92-16	FJ	Screw M6S 6x8
531 11 71-55	J	Plug connection 220 V	531 11 92-17	EF	Screw M6S 8x22
531 11 71-85	P	Contactora 200V	531 11 92-19	M	Screw M6S 8x30
531 11 71-95	J	Tubular rivet	531 11 92-49	B	Nut M6 headcap
531 11 71-96	J	Spring	531 11 92-50	D	Screw MLC6S 5x12
531 11 71-99	J	Extention socket 400-480V 16A	531 11 92-60	A	Washer 5x19x1
531 11 72-08	J	Personal Safety Guard	531 11 92-70	D	O-ring 24,2x3
531 11 72-15	L	Main switch 480-600V	531 11 93-05	N	Key 5x5x14
531 11 72-16	P	Softstart 400V	531 11 93-10	D	Key 8x7x25
531 11 72-23	L	Circuit breaker	531 11 93-25	AM	Washer 5,5x12
531 11 72-35	P	Contactora 400V	531 11 93-32	N	Washer 6,4x22x4
531 11 72-36	J	Electric inlet 600V 20A	531 11 94-07	M	Key 6x6x20
531 11 72-37	J	Extention socket 600V 20A	531 11 94-26	DGH	Screw K6S 6x16 10.9 fzb
531 11 72-71	J	Cover for fuses	531 11 94-46	N	Washer
531 11 73-07	KP	Cabel fitting M16	531 11 94-59	M	Stop
531 11 73-08	P	Cabel fitting M20	531 11 94-60	N	Cylindric pin
531 11 73-09	KP	Lock nut M16	531 11 94-61	K	Handle
531 11 73-10	P	Lock nut M20	531 11 94-62	K	Resilient set screw
531 11 73-11	J	Electric inlet	531 11 94-63	N	Cylindric pin
531 11 73-14	Q	Cable fitting	531 11 94-67	N	Bushing PCM 242715 B


No.	Pos.	Description	No.	Pos.	Description
531 11 94-68	N	Bearing HK 0810	531 12 43-13	H	Sealing plate
531 11 94-69	N	Bearing washer GS 81102	531 12 43-15	K	Handle
531 11 94-70	N	Raceway washer LS 1528	531 12 43-22	K	Rod to potentiometer
531 11 94-71	N	Bearing 6302-2RSH	531 12 43-23	K	Support
531 11 94-72	N	Flange bearing	531 12 43-25	L	Switch panel
531 11 94-74	AM	Spring mounting	531 12 43-28	K	Guide ring
531 11 94-78	D	Bearing bracet SY 30 TF	531 12 43-30	K	Support
531 11 94-79	M	Bearing bracket PFT 47	531 12 43-31	K	Potentiometer guide
531 11 94-80	M	Bearing YAR 204-2F	531 12 43-35	C	Contact fitting
531 11 94-84	B	Belt FS 700	531 12 43-35	C	Motorcontact with cable
531 11 94-86	E	Front wheel FS	531 12 43-41	L	Instruction sign
531 11 94-87	D	Shaft seal BABSL 38x50x6	531 12 43-42	B	Support
531 11 94-88	E	Washer TBRSB 8,4x26	531 12 43-44	F	Locking washer
531 11 94-89	M	Screw MVBF 8x20	531 12 43-46	N	Pivoting unit
531 11 94-90	N	Screw RXK ST 4,2x6,5	531 12 43-52	N	Gearbox, lower part
531 11 94-92	F	Key 8x7x40	531 12 43-53	N	Gearbox cover
531 11 94-95	E	Washer 20x36	531 12 43-56	N	Spur gear motor
531 11 94-97	D	Nut M8 headcap	531 12 43-57	N	Middle gear complete
531 11 94-98	N	V-ring 35	531 12 43-58	N	Large spur gear
531 11 95-01	H	Screw K6S 10x40 10.9 fzb	531 12 43-59	N	Small spur gear
531 11 95-02	MQ	Screw M6SF 6x16 8.8 fzb	531 12 43-60	N	Spur gear feeding screw
531 11 95-03	A	Ball D25	531 12 43-61	N	Nut washer
531 11 95-05	F	Spring	531 12 43-62	N	Feeding screw
531 11 95-10	D	Screw K6S 6x10 10.9 fzb	531 12 43-63	N	Distance
531 11 95-11	DF	Screw K6S 8x16 10.9 fzb	531 12 43-65	N	Stopping
531 11 95-12	D	Screw M6S 12x16	531 12 43-83	M	Feeding gear
531 11 95-19	D	Screw M6S 12x30 left threaded	531 12 43-84	E	Rear wheel floorsaw
531 11 95-56	DF	Key 8x7x60	531 12 43-85	E	Distance
531 11 95-64	B	Cylindrical pin 3/8x1"	531 12 43-86	E	Spur gear rear wheel
531 11 95-79	Q	Screw M6SF 6x10	531 12 43-98	A	Handle Bladeguard
531 11 95-85	K	Potentiometer knob	531 12 44-24	F	Lock
531 11 95-94	E	Wheel cap kit	531 12 44-30	A	Bladeguard holder
531 11 96-03	M	Screw M10x50 nylon	531 12 44-42	A	Distance washer
531 12 41-43	F	Bearing	531 12 44-43	A	Distance
531 12 41-44	F	Distance	531 12 44-45	BD	Sealing washer
531 12 41-45	F	Cutting head axis	531 12 44-47	P	Mounting plate
531 12 41-50	L	Water valve knob	531 12 44-48	A	Rubber to splash guard
531 12 41-52	P	Electric box	531 12 44-54	Q	Clamp
531 12 41-58	P	Cover electric box	531 12 44-55	K	Handle guide
531 12 41-59	P	Bracket for electric box	531 12 44-56	N	Bearing plate
531 12 41-61	J	Bracket	531 12 44-59	K	Socket left
531 12 41-64	J	Bracket hose carrier	531 12 44-60	K	Socket right
531 12 41-79	E	Wheel axle	531 12 44-61	N	Motor cap
531 12 41-97	D	Runner	531 12 44-63	M	Sealing plate
531 12 42 69	A	Splash guard	531 12 44-86	B	Pulley electric motor 60Hz
531 12 42-04	B	Pulley motor 7,5kW 50Hz	531 12 44-87	B	Pulley blade shaft 60Hz
531 12 42-14	B	Pulley blade shaft FS 700 50Hz	531 12 44-91	BD	Blade flange inner
531 12 42-16	D	Water block	531 12 44-92	BD	Centre
531 12 42-17	D	Holding plate	531 12 44-93	B	Blade flange outer
531 12 42-18	D	Cover	531 12 44-95	D	Cap
531 12 42-19	D	Sealing sleeve	531 12 44-99	N	Pivot spring
531 12 42-26	B	Belt cover FS 700	531 12 45-05	F	Lever arm
531 12 42-27	B	Inner belt cover FS 700	531 12 45-06	N	Spring socket
531 12 42-30	L	Clamp for water valve	531 12 45-12	C	Motorbracket plate FS 700
531 12 42-31	M	Stop dog	531 12 45-15	A	Distance
531 12 42-43	D	Inner flange guard	531 12 45-16	A	Spring 12 revolutions
531 12 42-44	D	Flange guard bracket	531 12 45-17	M	Spring 20 revolutions
531 12 42-45	D	Flange guard	531 12 45-20	N	Slide sleeve
531 12 42-68	A	Holder	531 12 45-21	N	Feeding nut FS 700
531 12 42-94	M	Motor mounting plate	531 12 45-22	N	Rubber damper
531 12 42-97	M	Spur gear	531 12 45-32	H	Sleeve
531 12 42-98	M	Mounting plate	531 12 45-34	M	Splash guard wheel cover
531 12 43-01	M	Feeding axis	531 12 45-36	A	Rubber piece
531 12 43-02	M	Spur gear feeding axis	531 12 45-66	Q	Tool bracket
531 12 43-03	M	Lifting bar	531 14 10-99	P	Phase indicator
531 12 43-04	M	Cam	531 14 11-22	J	Hinge
531 12 43-06	H	Pedal	531 14 11-50	J	Gasket fuse cover
531 12 43-09	H	Pedal axis	531 14 12-34	Q	Label
531 12 43-10	H	Distance ring	720 13 54-06	B	Cylindrical pin 6x22
531 12 43-11	H	Guide pin	720 15 20-50	C	Cylindrical pin 12x50

No.	Pos.	Description	No.	Pos.	Description
721 42 07-00	N	Spring pin 3x14			
721 42 08-00	K	Spring pin 3x16			
721 42 61-50	N	Spring pin 4x30			
721 43 49-00	A	Spring pin 6x50			
721 43 75-00	F	Spring pin 8x20			
722 78 25-03	J	Blind rivet 3.2x10 al/al			
723 12 20-01	P	Screw MCS 3x6			
723 12 24-01	C	Screw MCS 3x10			
723 12 91-01	J	Screw MCS 4x12			
723 12 93-01	P	Screw MCS 4x16			
723 13 31-01	J	Screw MCS 5x20			
723 52 92-01	J	Screw MFS 4x14			
725 24 49-71	EM	Screw M6S 8x16			
725 24 59-51	F	Screw M6S 8x40			
725 25 43-51	D	Screw M6S 12x55			
725 25 44-91	D	Screw 12x60			
725 25 50-51	F	Screw M6S 12x90			
725 25 50-71	C	Screw M6S 12x90H			
725 53 23-01	KLN	Screw MC6S 5x8			
725 53 68-01	N	Screw MC6S 6x16			
725 53 70-01	A	Screw MC6S 6x20			
725 53 72-01	A	Screw MC6S 6x25			
725 53 74-01	E	Screw MC6S 6x30			
725 53 82-01	P	Screw MC6S 6x60			
725 54 87-01	G	Screw MC6S 10x12			
725 63 25-51	BD	Screw MF6S 5x10			
725 63 68-51	A	Screw MF6S 6x16 10.9			
725 64 49-51	D	Screw MF6S 8x16			
725 64 89-51	D	Screw MF6S 10x16			
728 52 83-05	K	Stop screw P6SS 4x4			
728 52 87-05	N	Stop screw P6SS 4x8			
728 73 66-05	BDM	Stop screw S6SS 6x12			
728 82 87-05	M	Stop screw SK6SS 4x8			
728 84 43-01	M	Stop screw SK6SS 8x8			
728 84 45-05	F	Stop screw SK6SS 8x10			
731 23 12-01	P	Nut M4			
731 23 14-01	NP	Nut M6M M5			
731 23 20-01	M	Nut M10			
731 23 22-01	C	Nut M12			
731 43 20-01	K	Nut M10 low			
732 25 12-01	J	Nut M4 nylock			
732 25 14-01	J	Nut M5 nylock			
732 25 16-01	BGM	Nut M6 Nylock			
732 25 18-01	M	Nut M8 Nylock			
732 25 20-01	H	Nut M10 Nylock			
732 25 22-71	D	Nut M12 Nylock 10.9			
734 11 23-71	P	Washer 3.2x6			
734 11 35-71	J	Washer 4.3x8			
734 11 46-01	DJLNP	Washer 5,3x10x1			
734 11 52-01	BGHJLMP	Washer 6.4x12			
734 11 63-01	EFM	Washer 8.4x16			
735 31 33-10	H	Seeger circlip SGH 35			
735 31 38-10	N	Seeger circlip SGH 42			
738 22 02-24	H	Bearing 6202-2RS1 C2			
740 38 34-01	J	Sealing ring 3/8			


**A** FS 700 EX

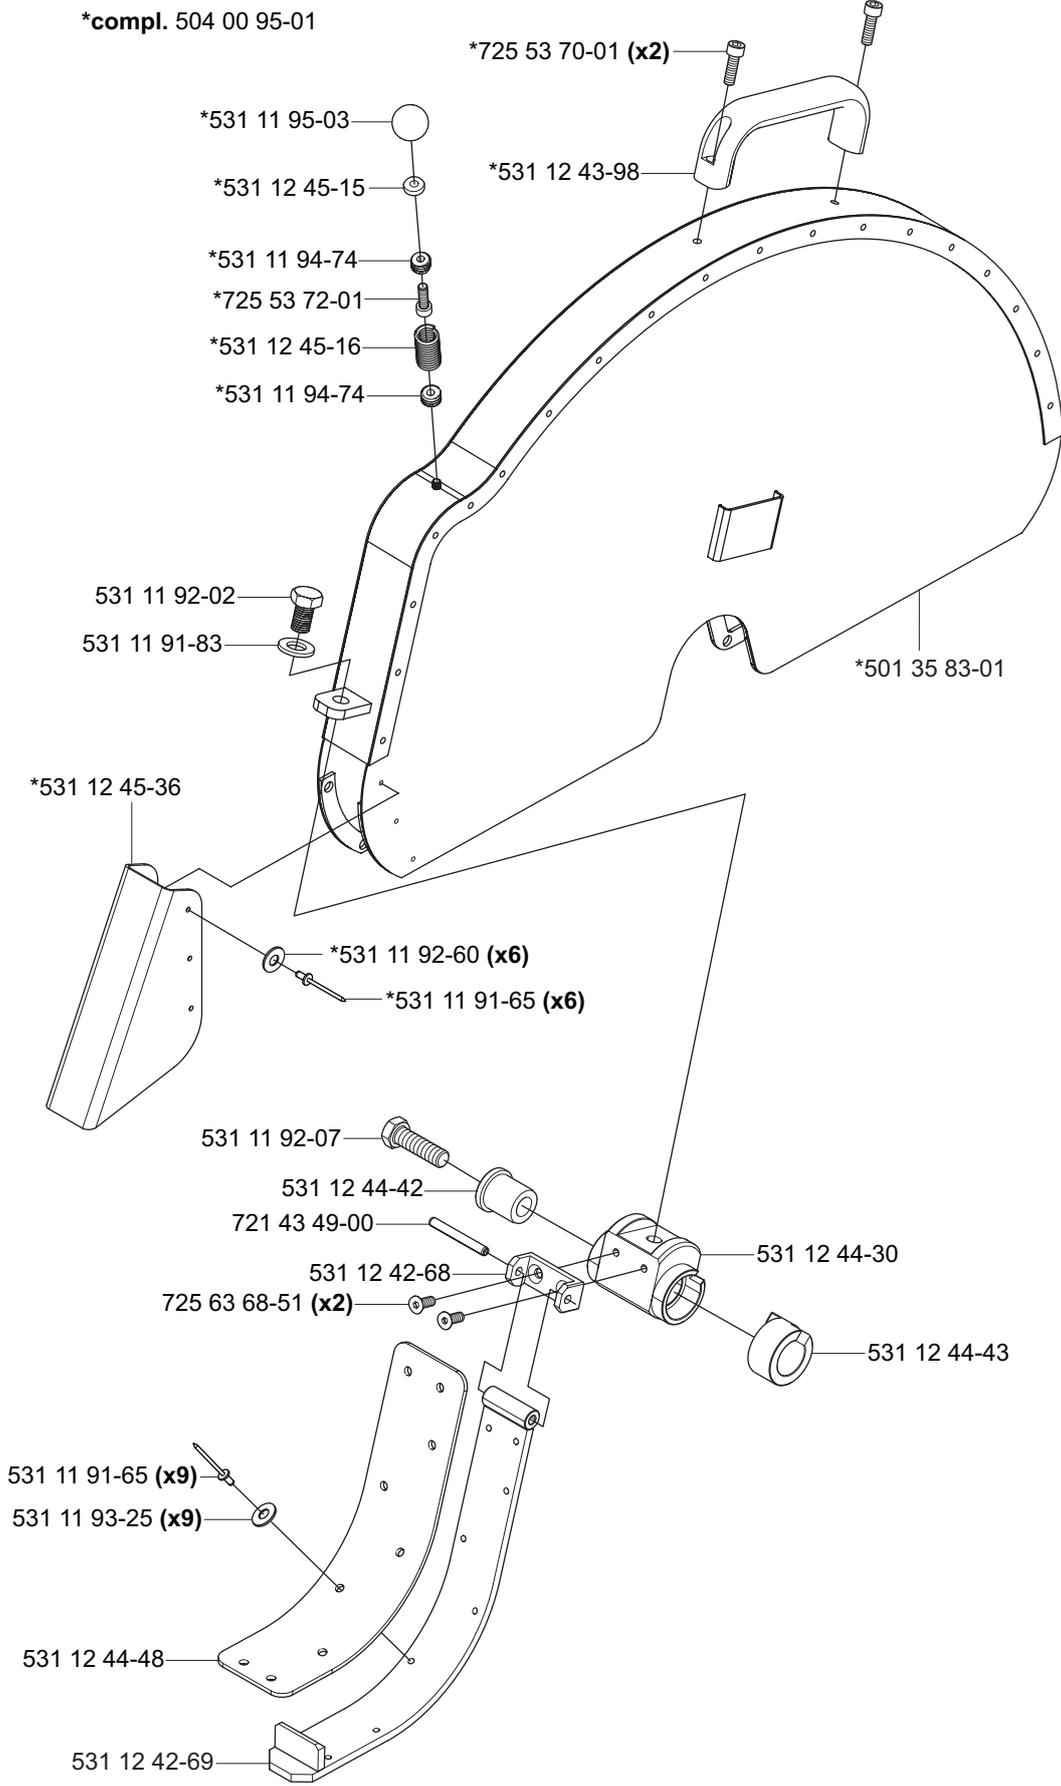


## B FS 700 EX

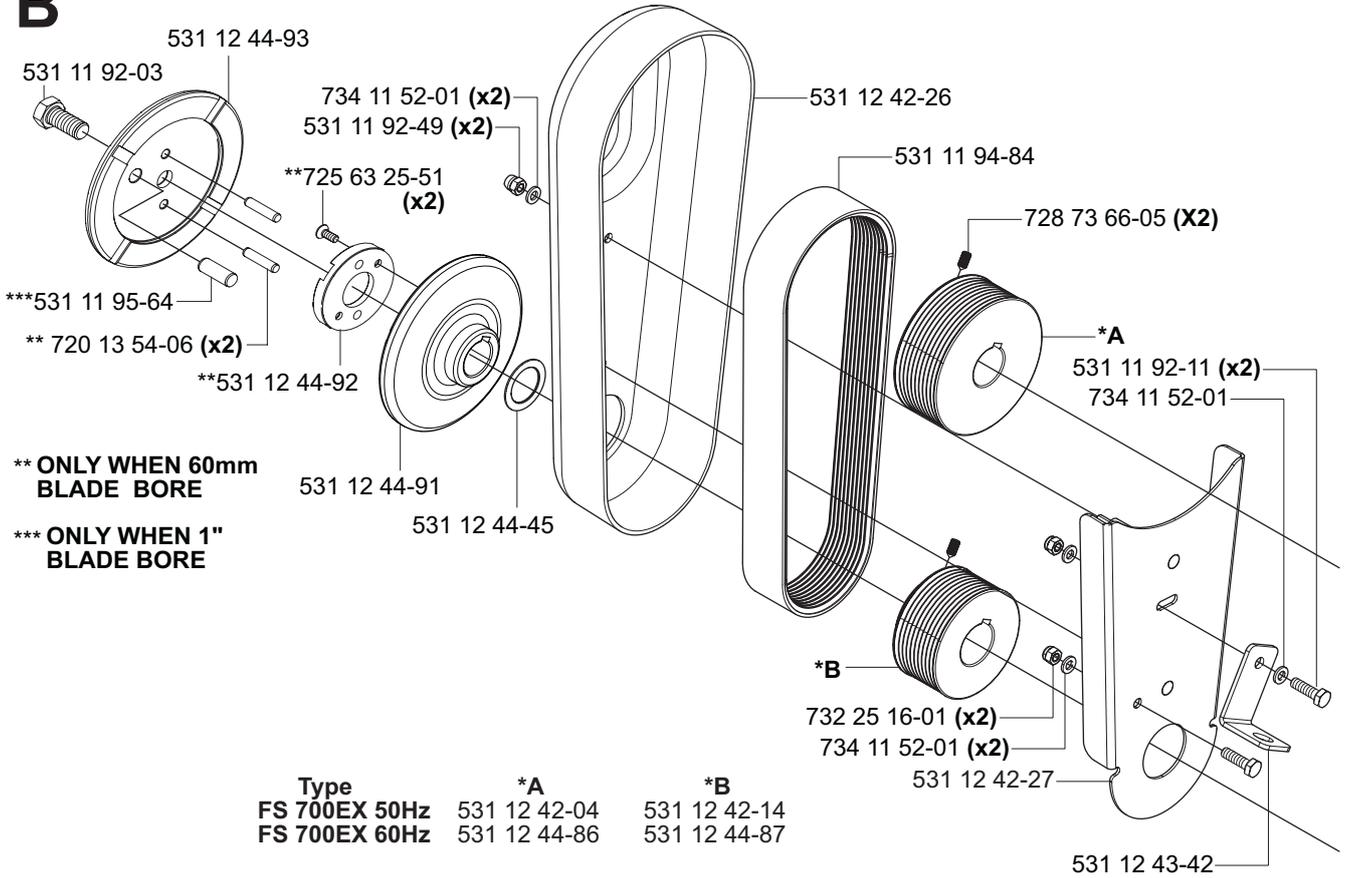

## C FS 700 EX

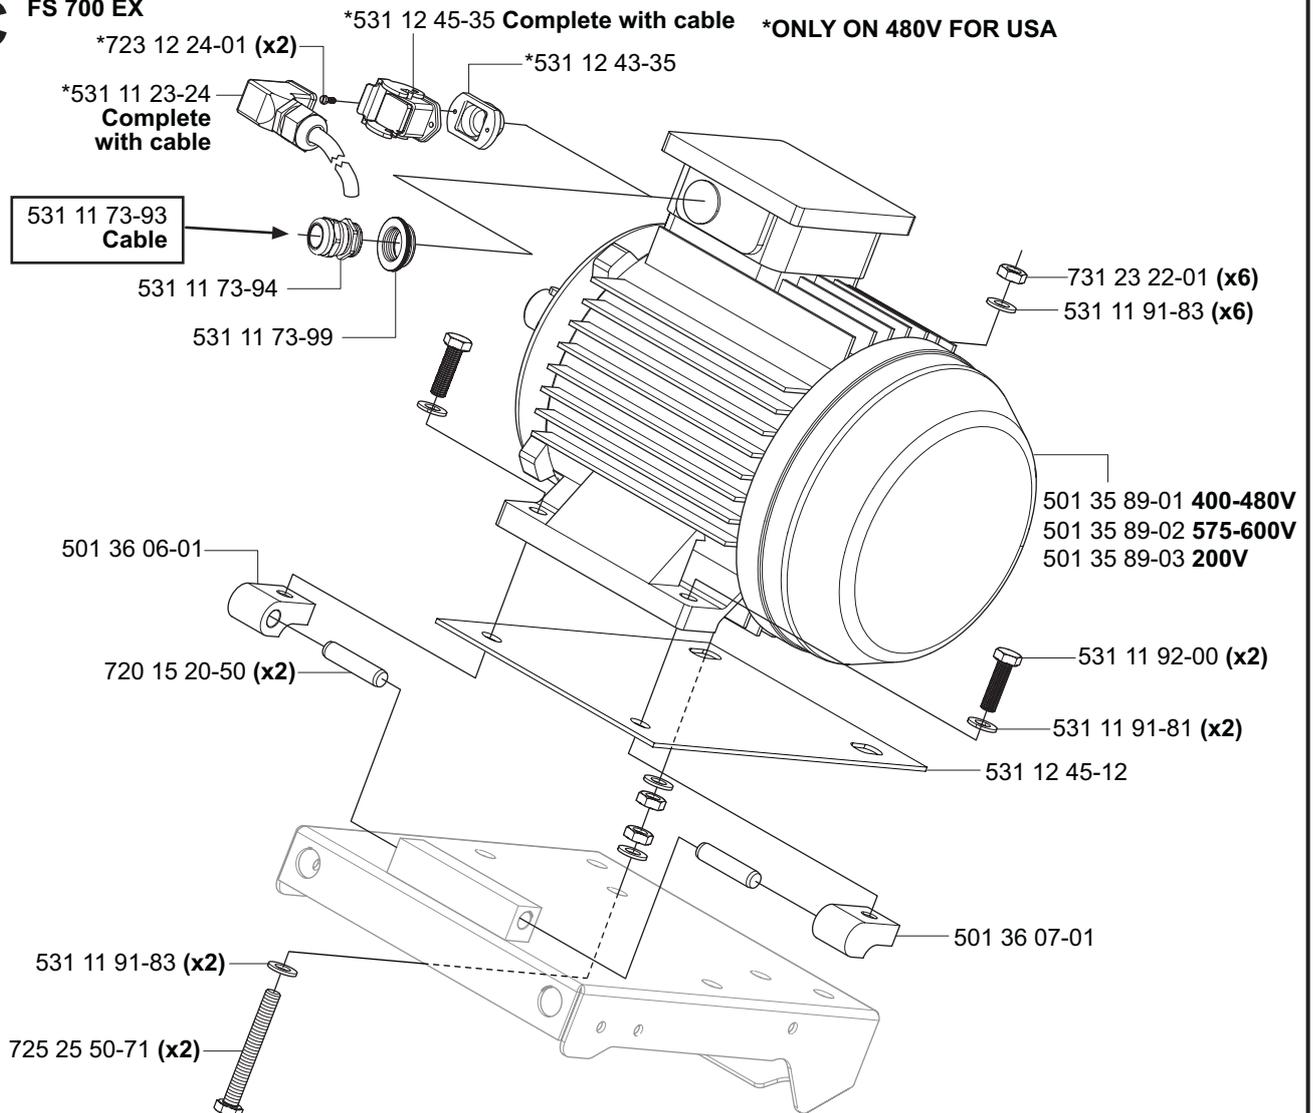


**D** FS 700 EX

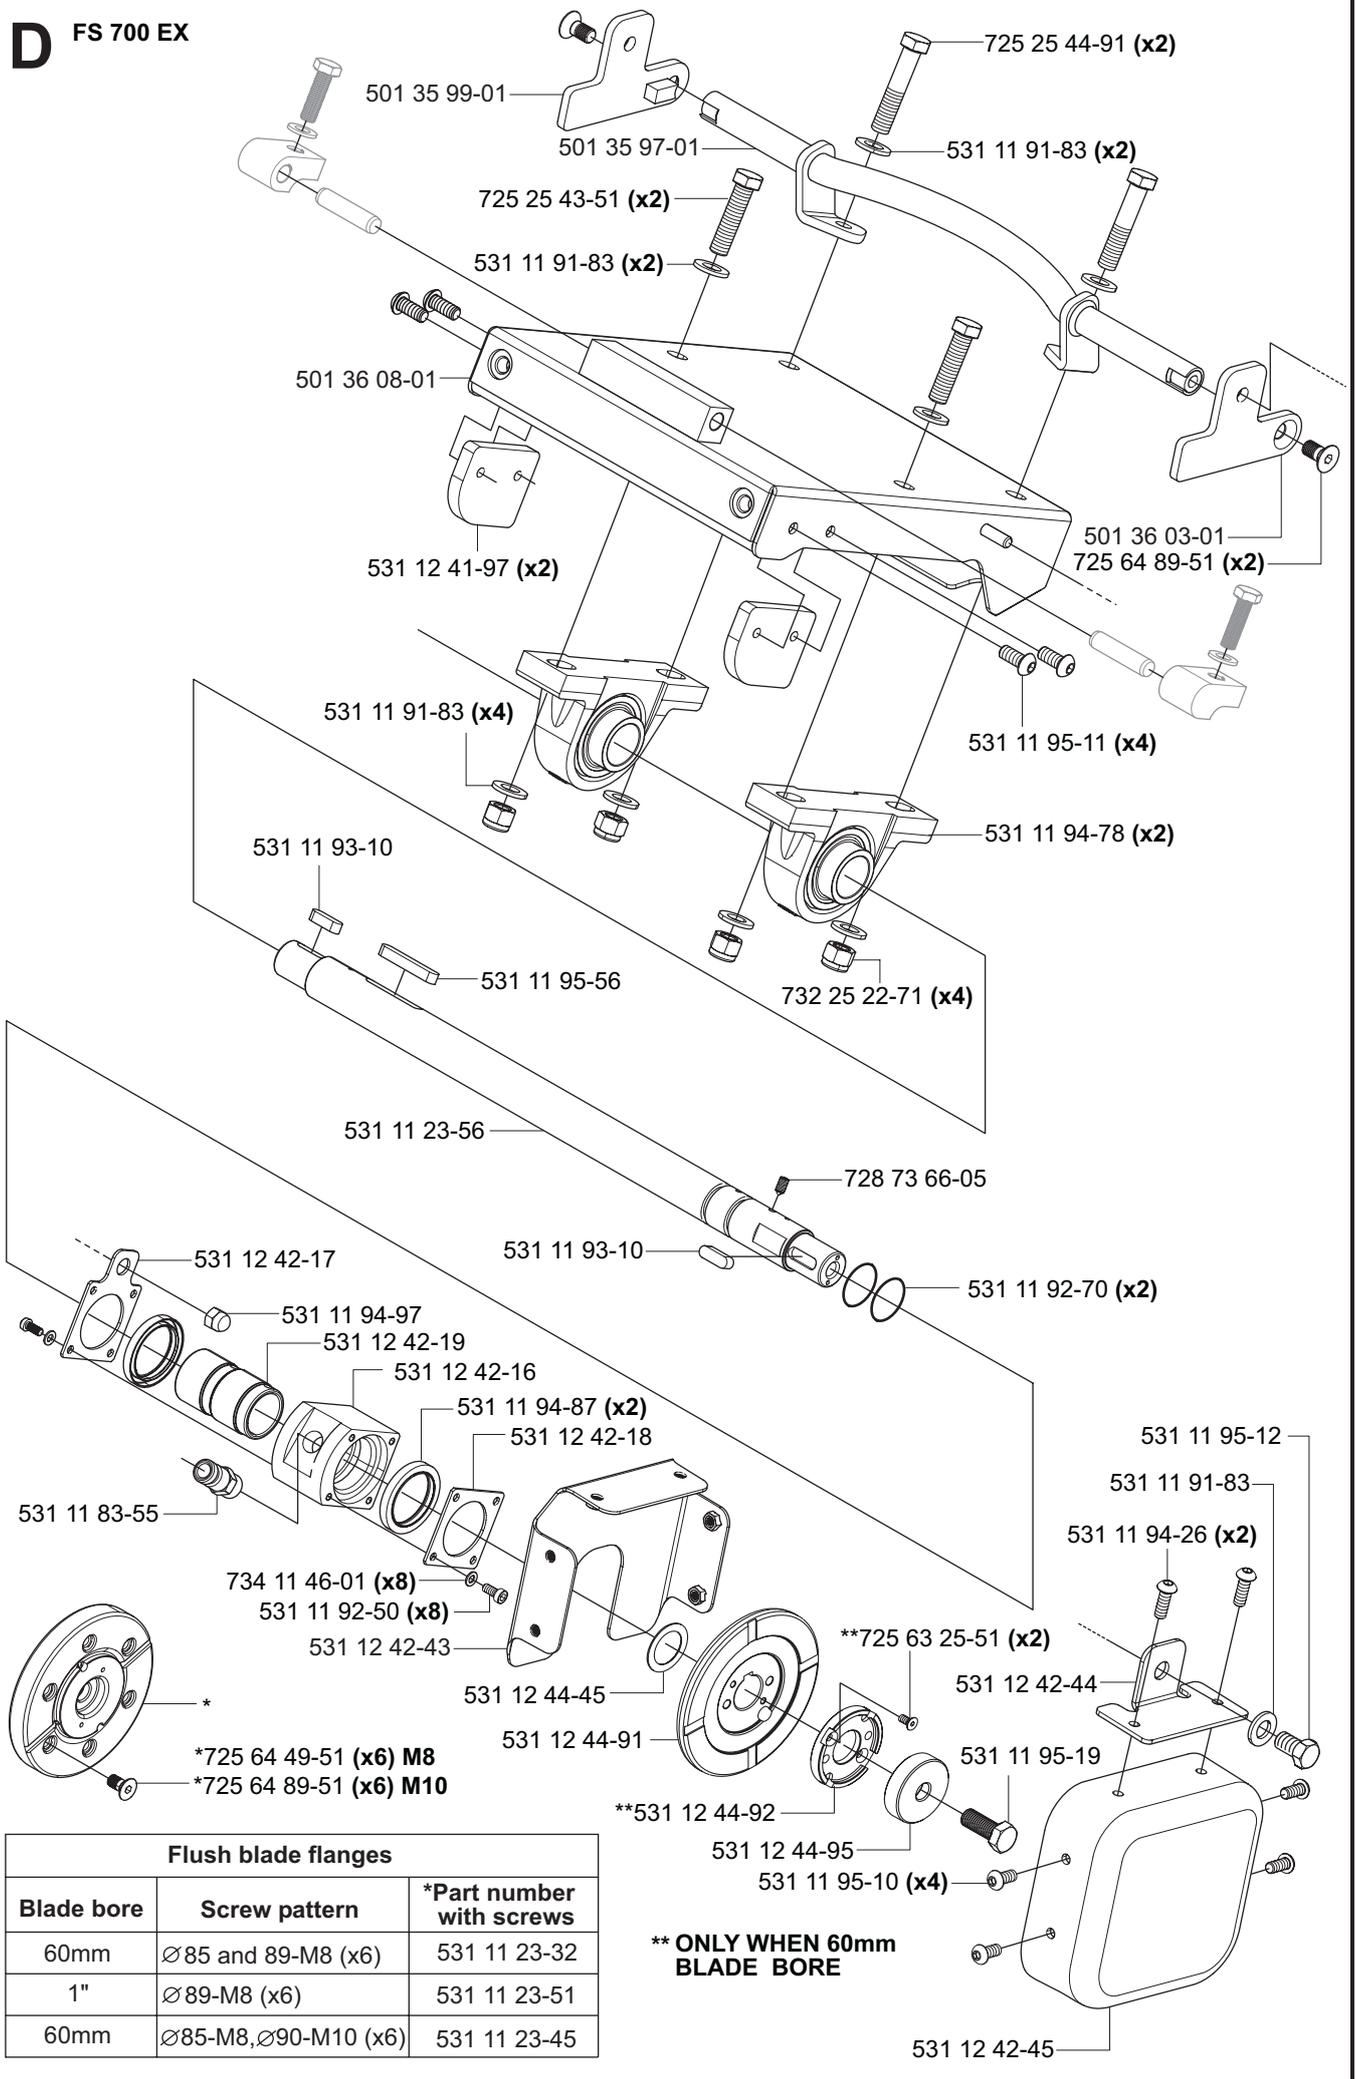


Flush blade flanges		
Blade bore	Screw pattern	*Part number with screws
60mm	∅85 and 89-M8 (x6)	531 11 23-32
1"	∅89-M8 (x6)	531 11 23-51
60mm	∅85-M8,∅90-M10 (x6)	531 11 23-45

**\*\* ONLY WHEN 60mm BLADE BORE**


**E** FS 700 EX

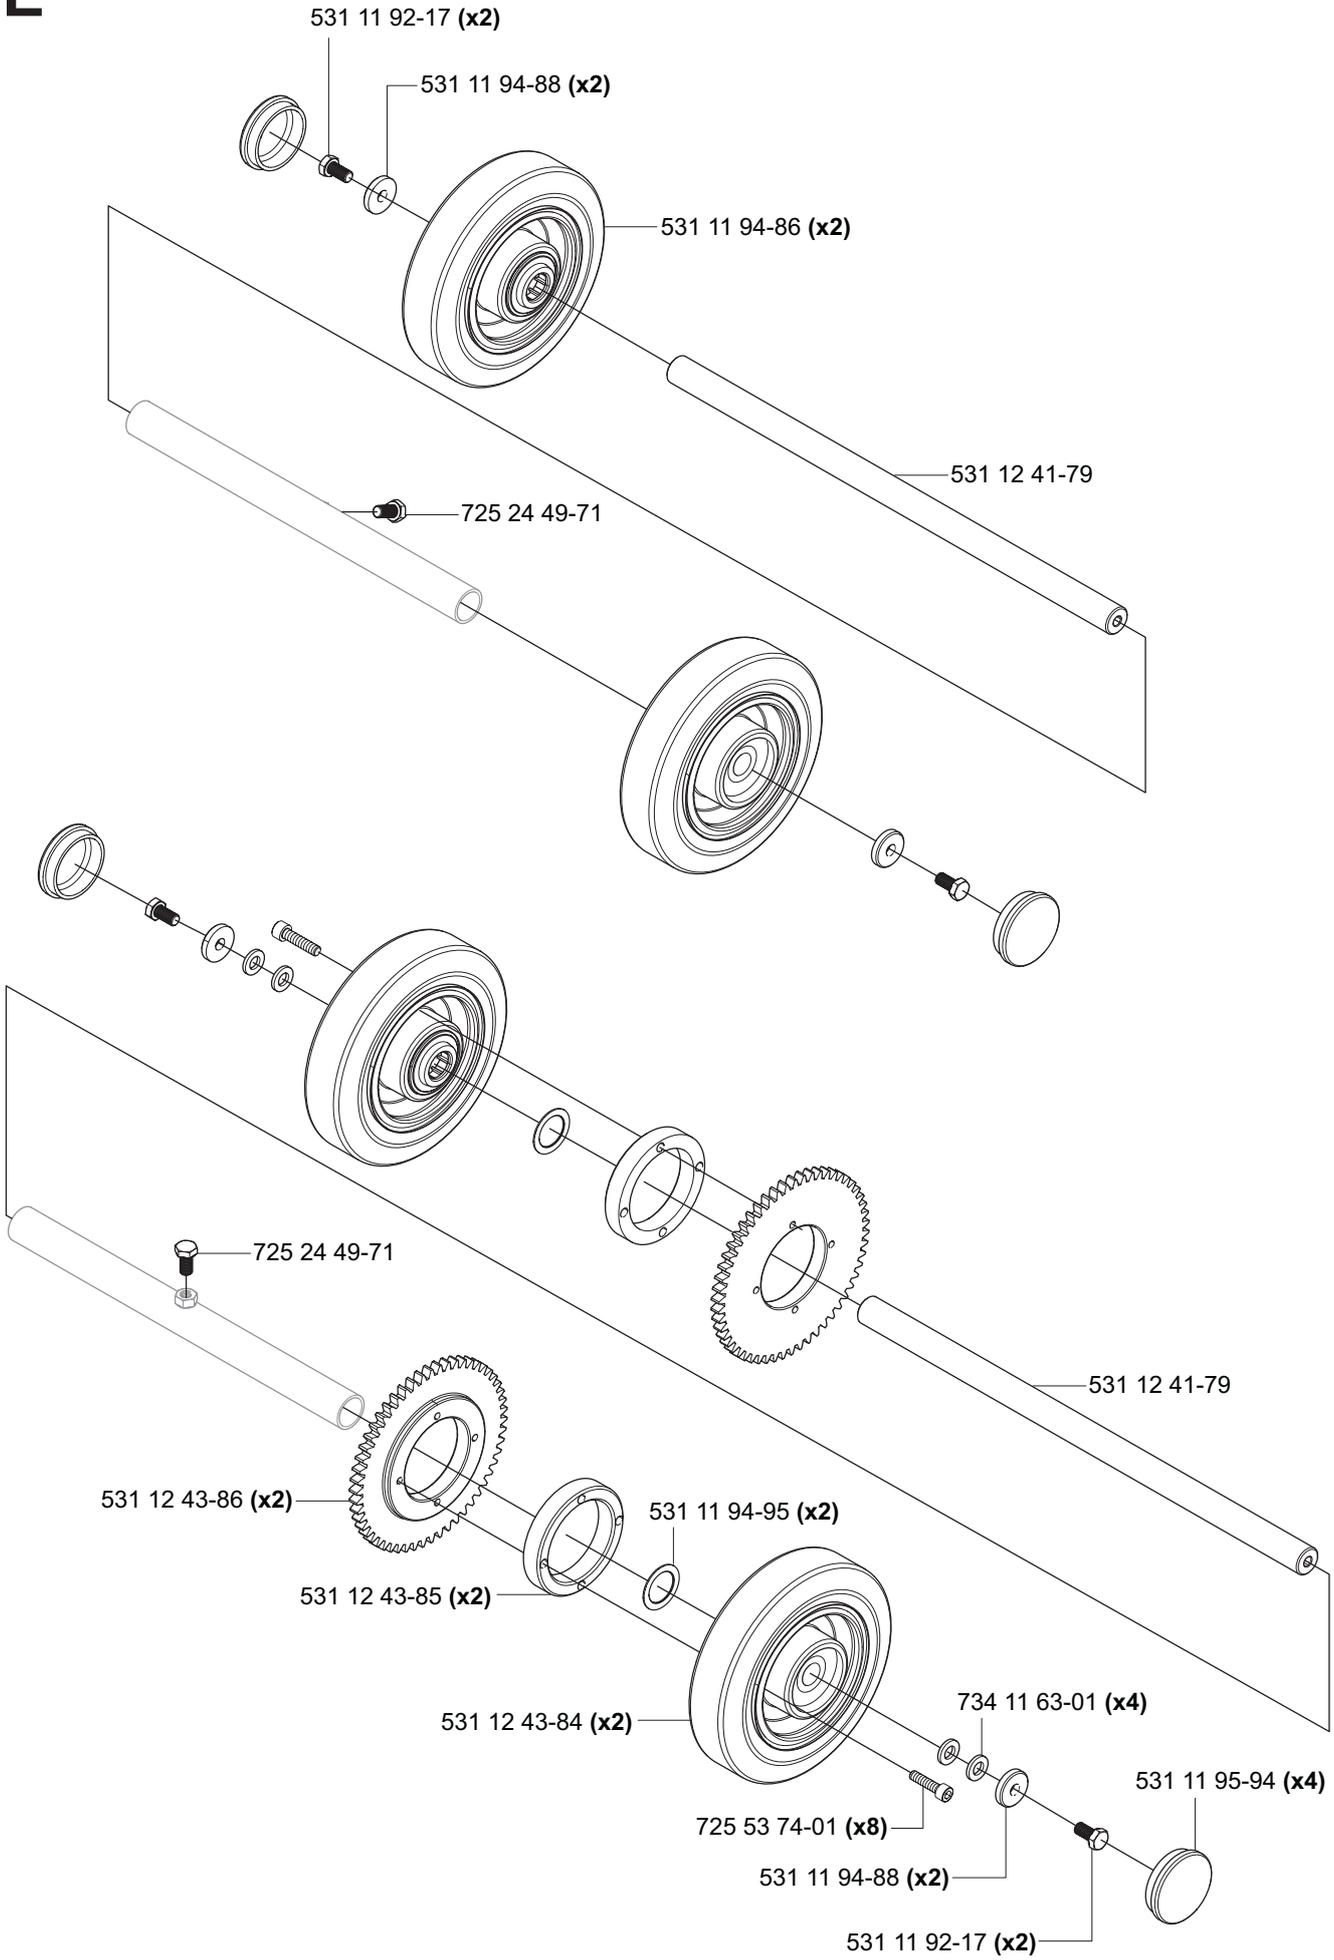


**F** FS 700 EX

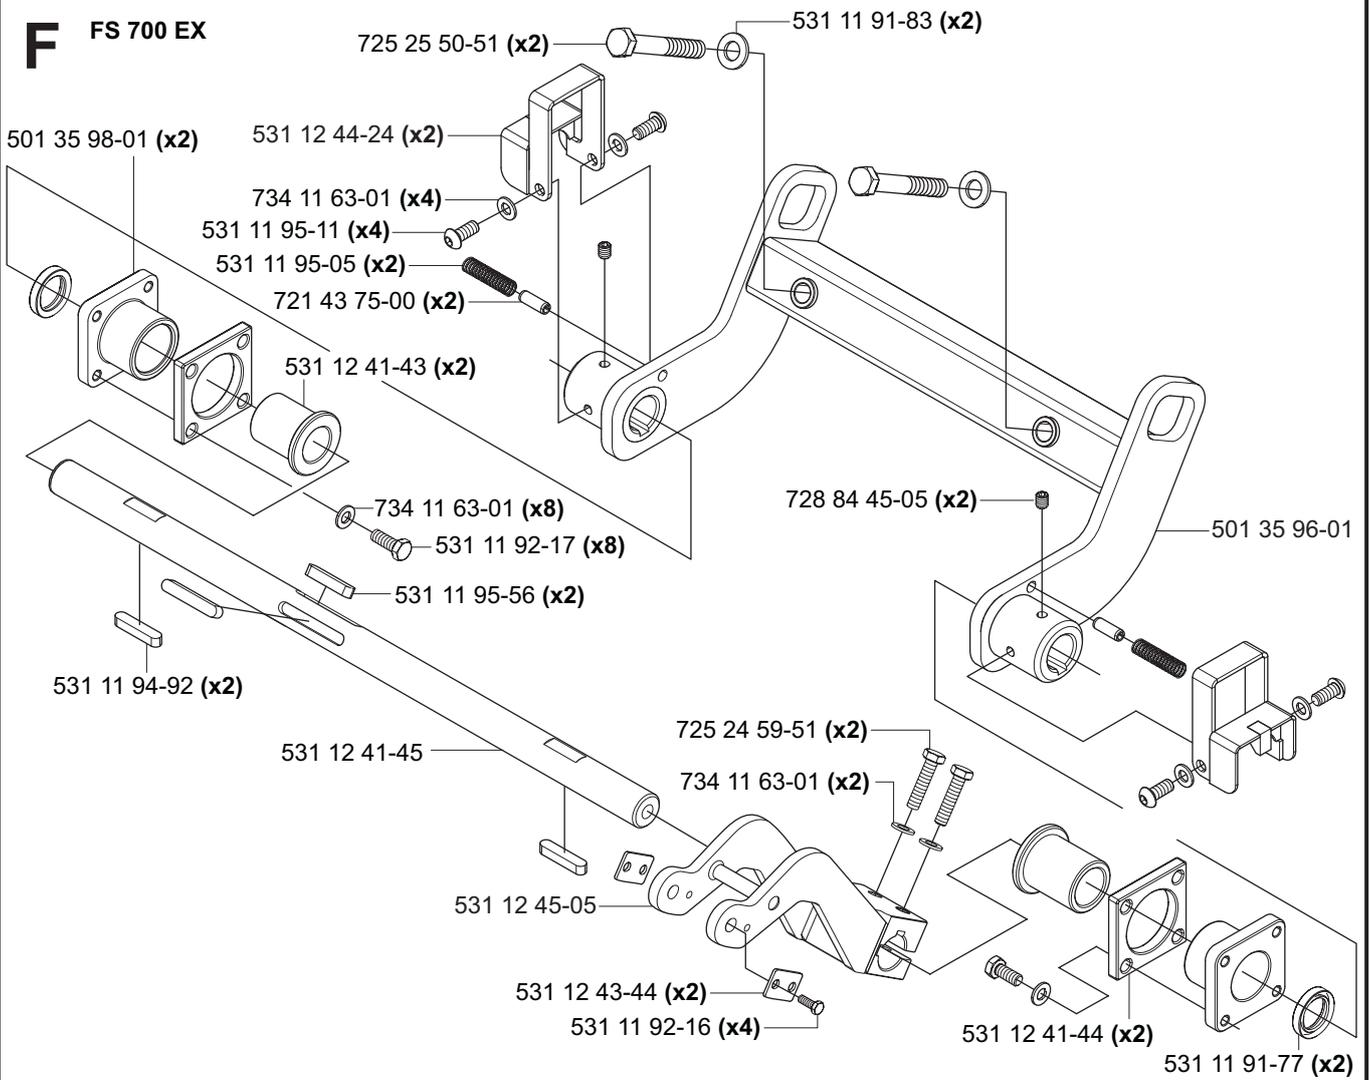


**G** FS 700 EX

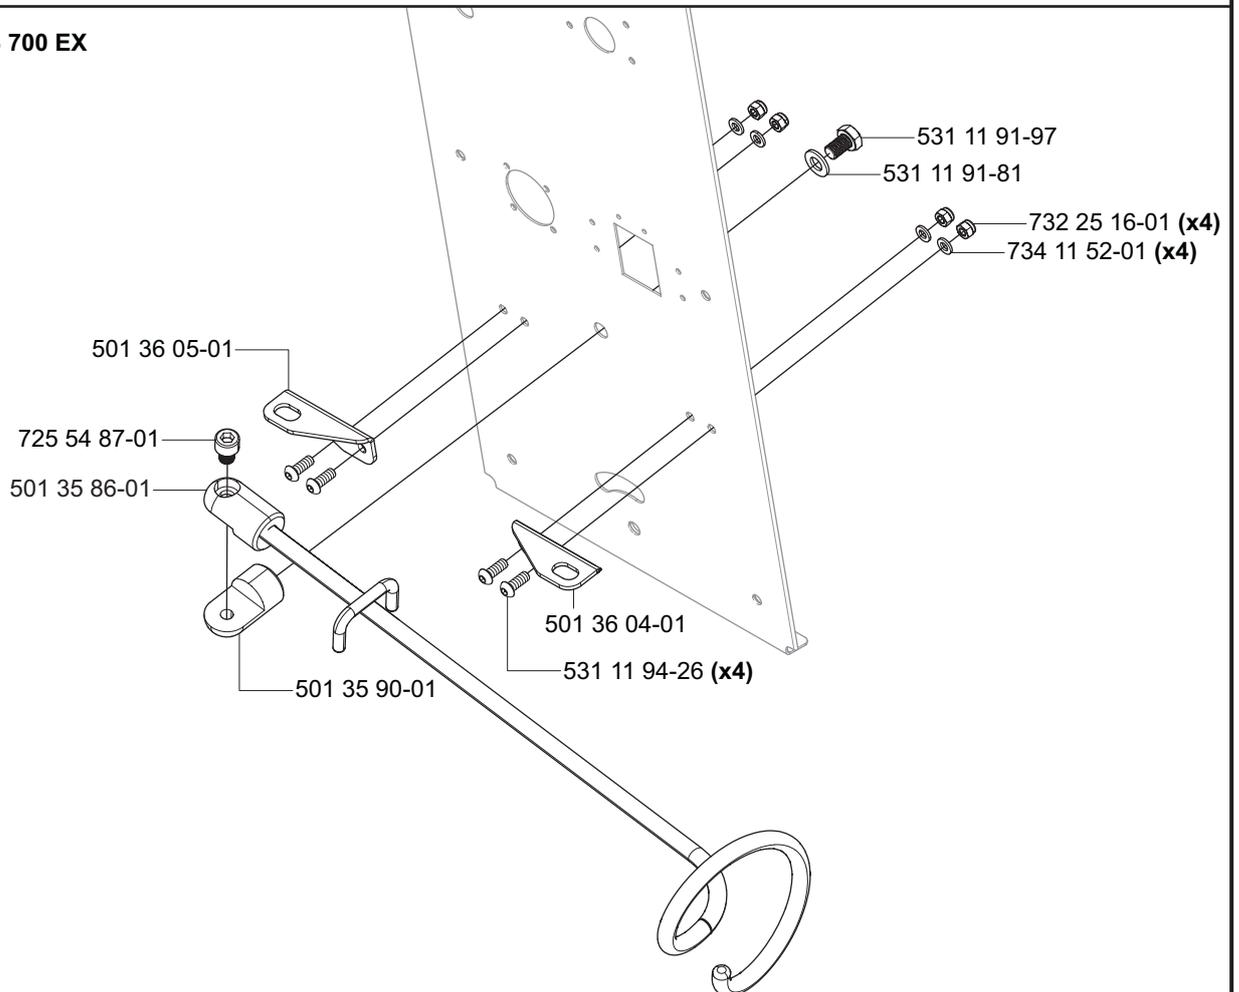

# H FS 700 EX


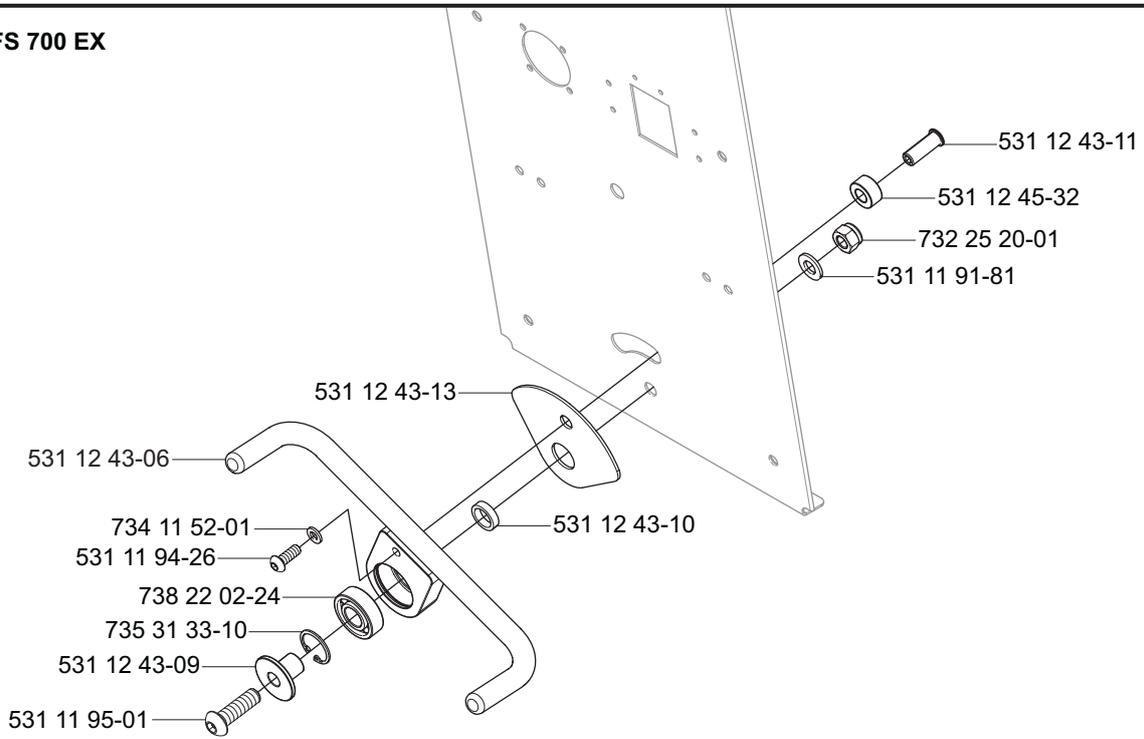


# J FS 700 EX


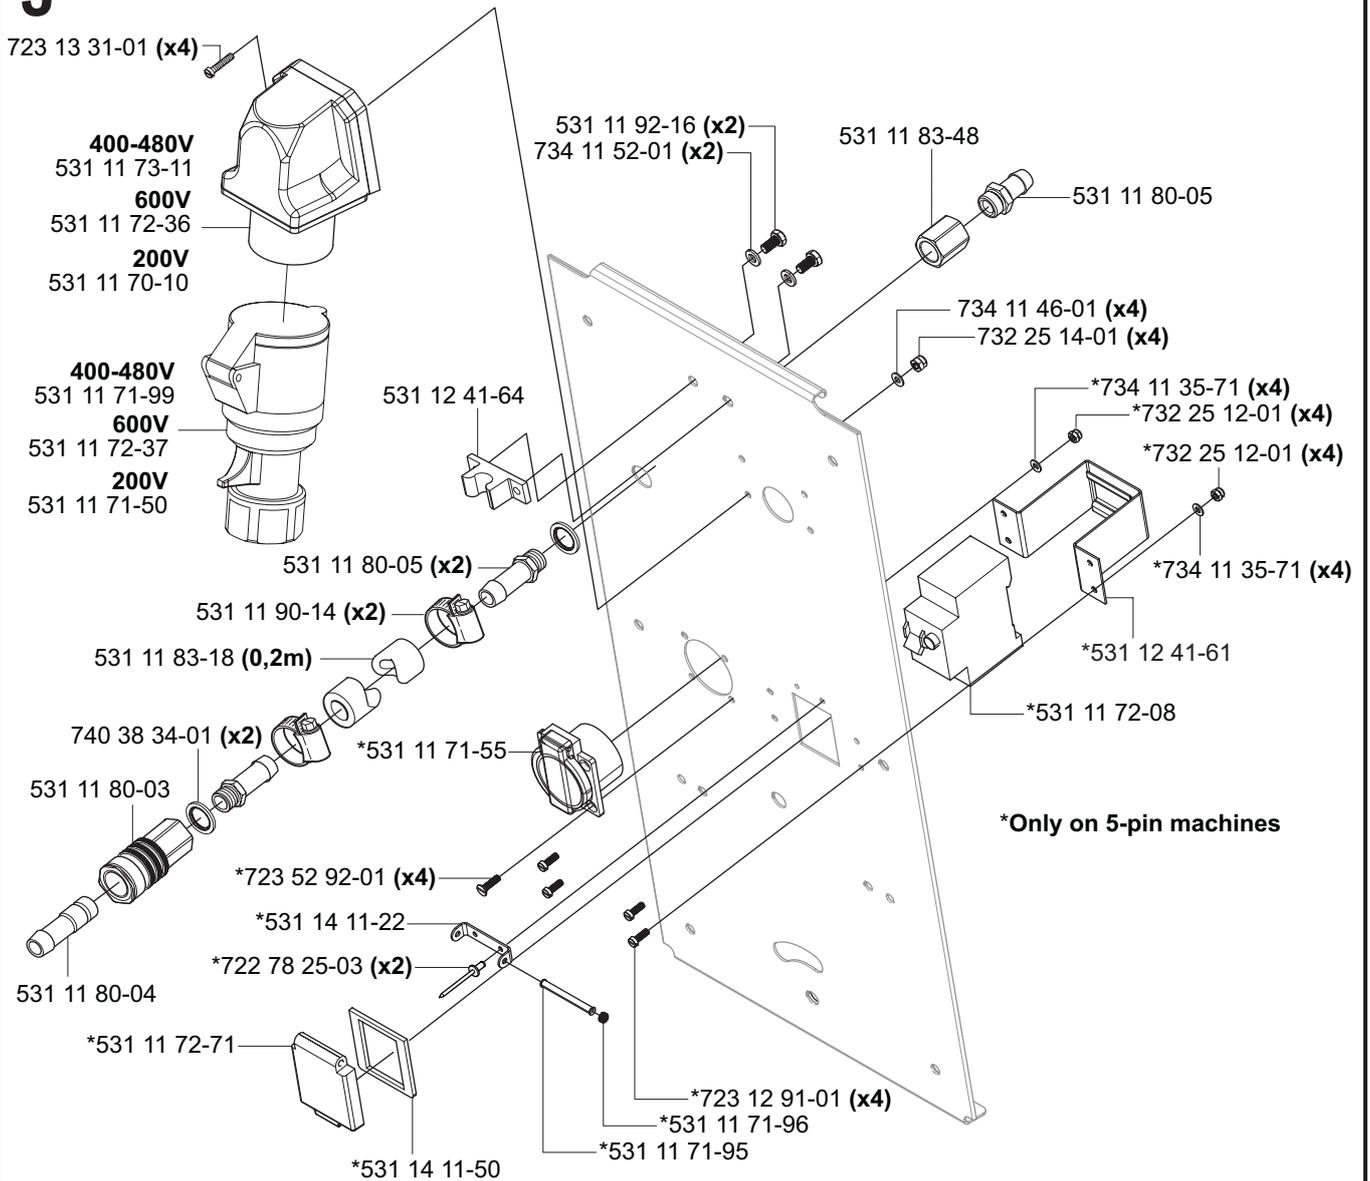


**K**

 FS 700 EX

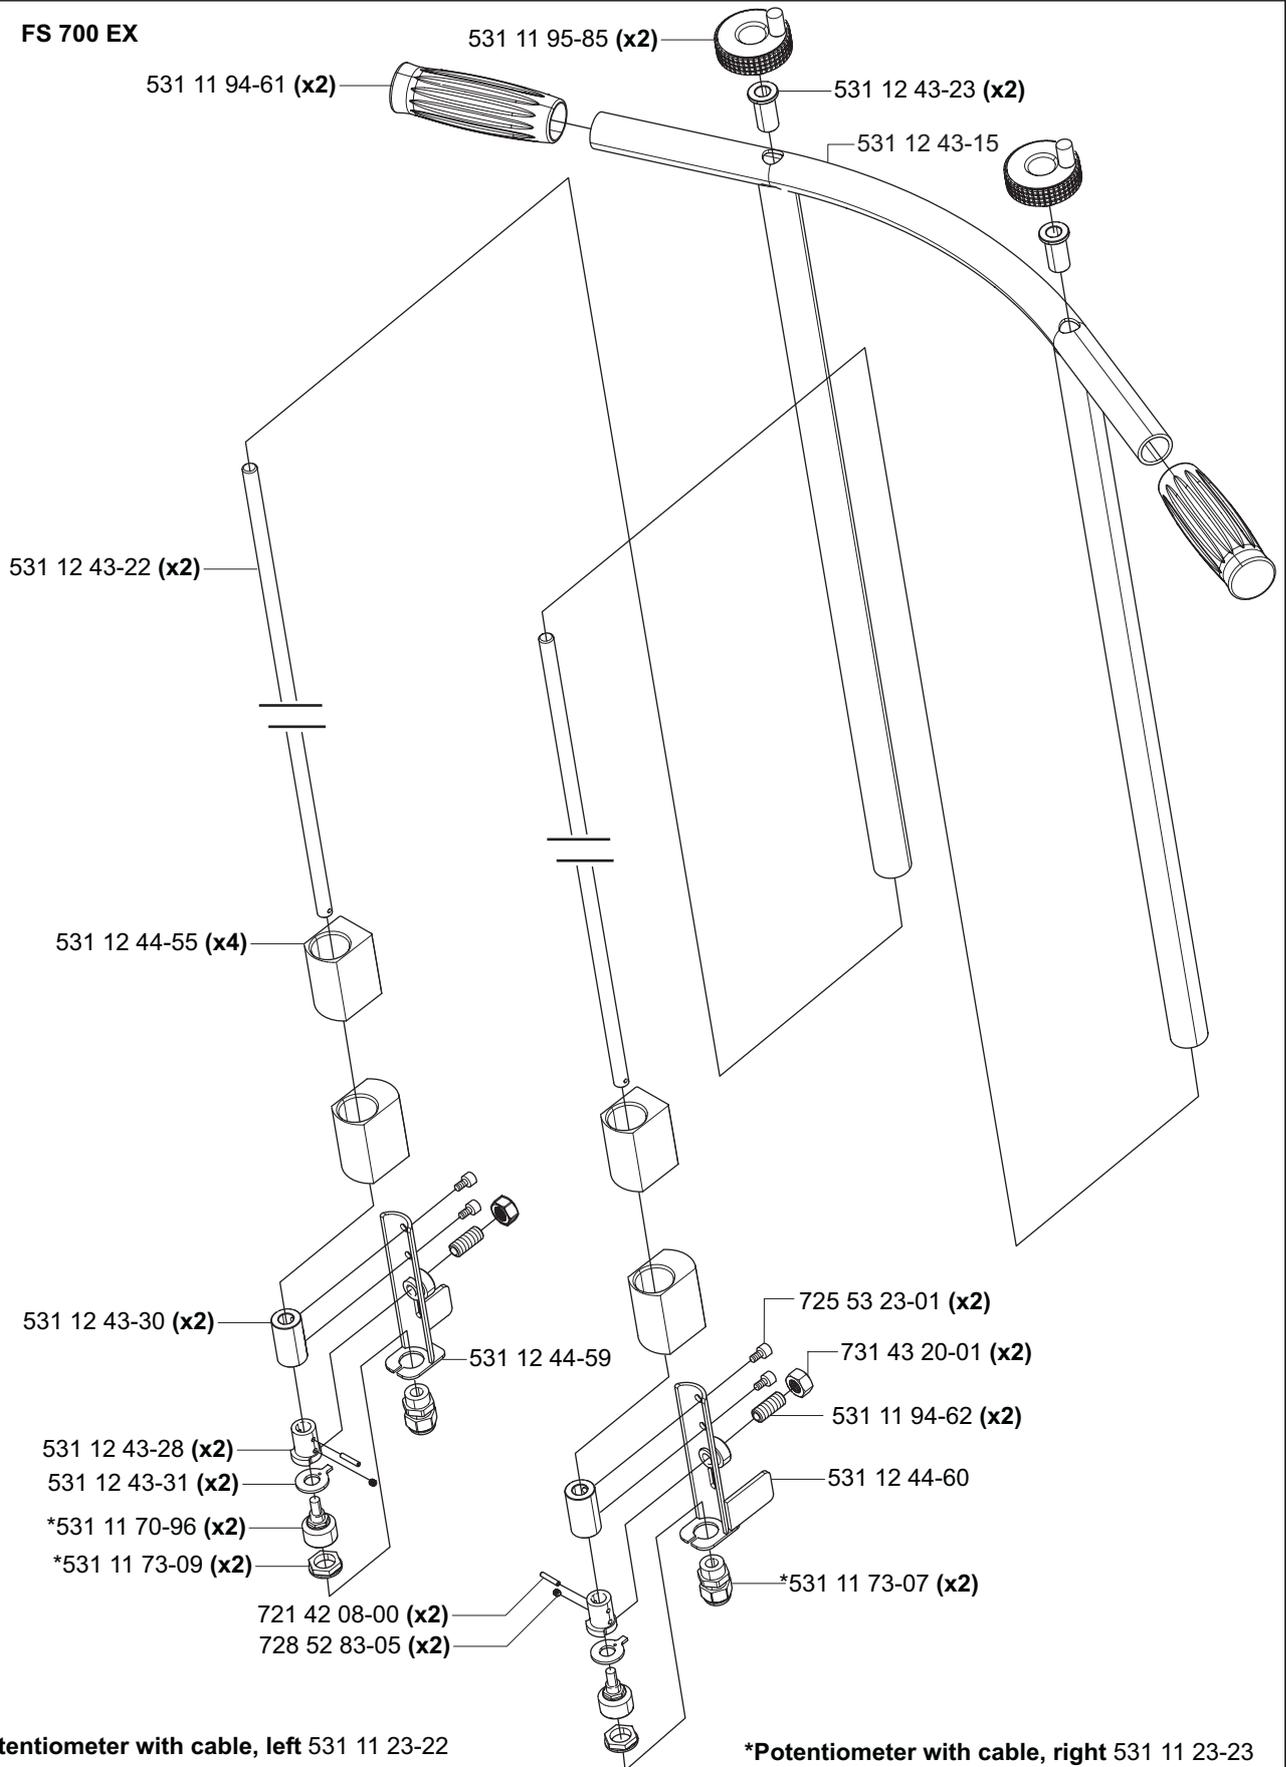


\*531 11 23-25

 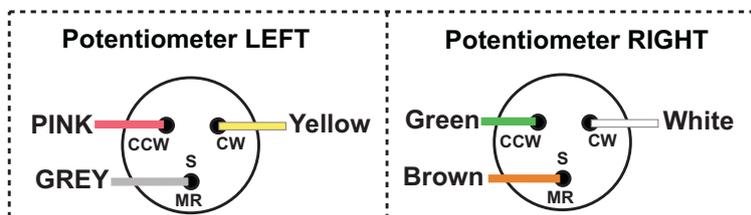


\*531 11 23-26




FS 700 EX

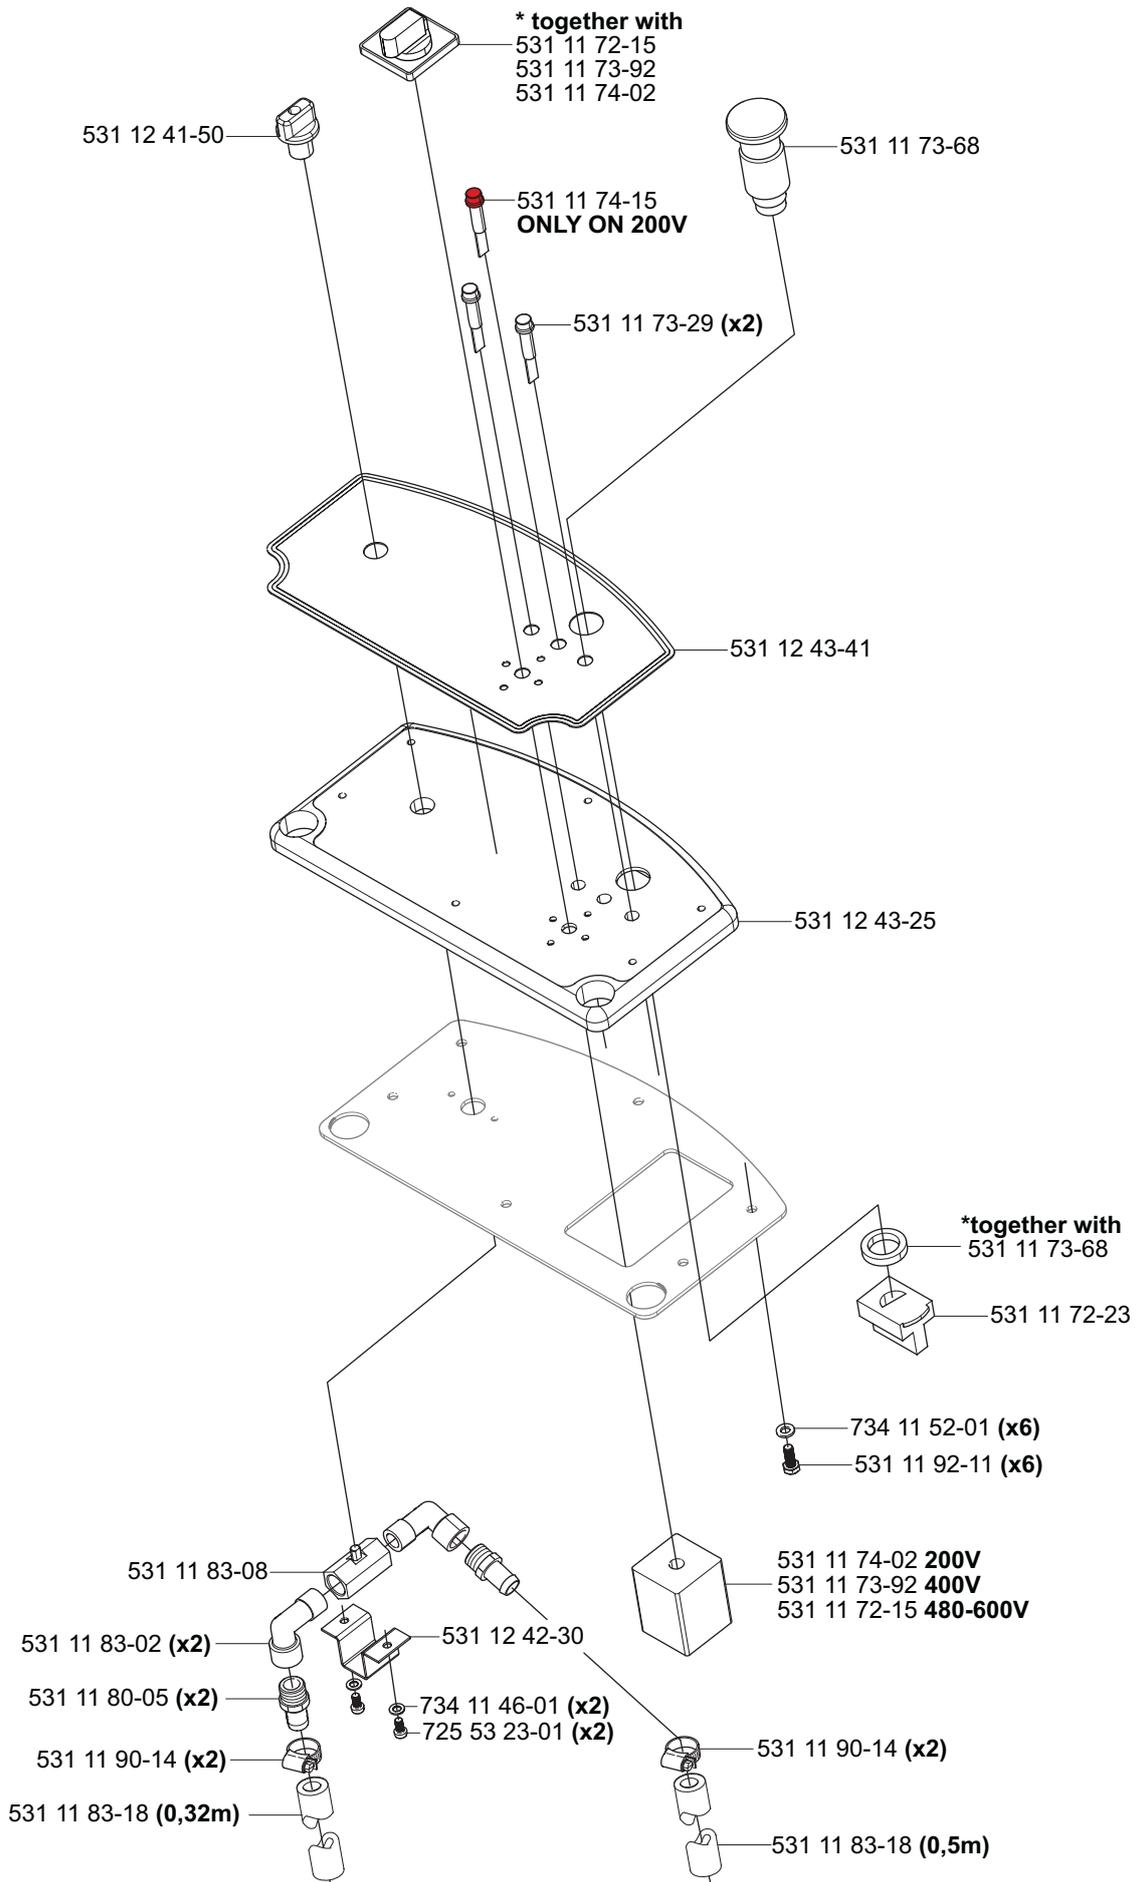

**M** FS 700 EX

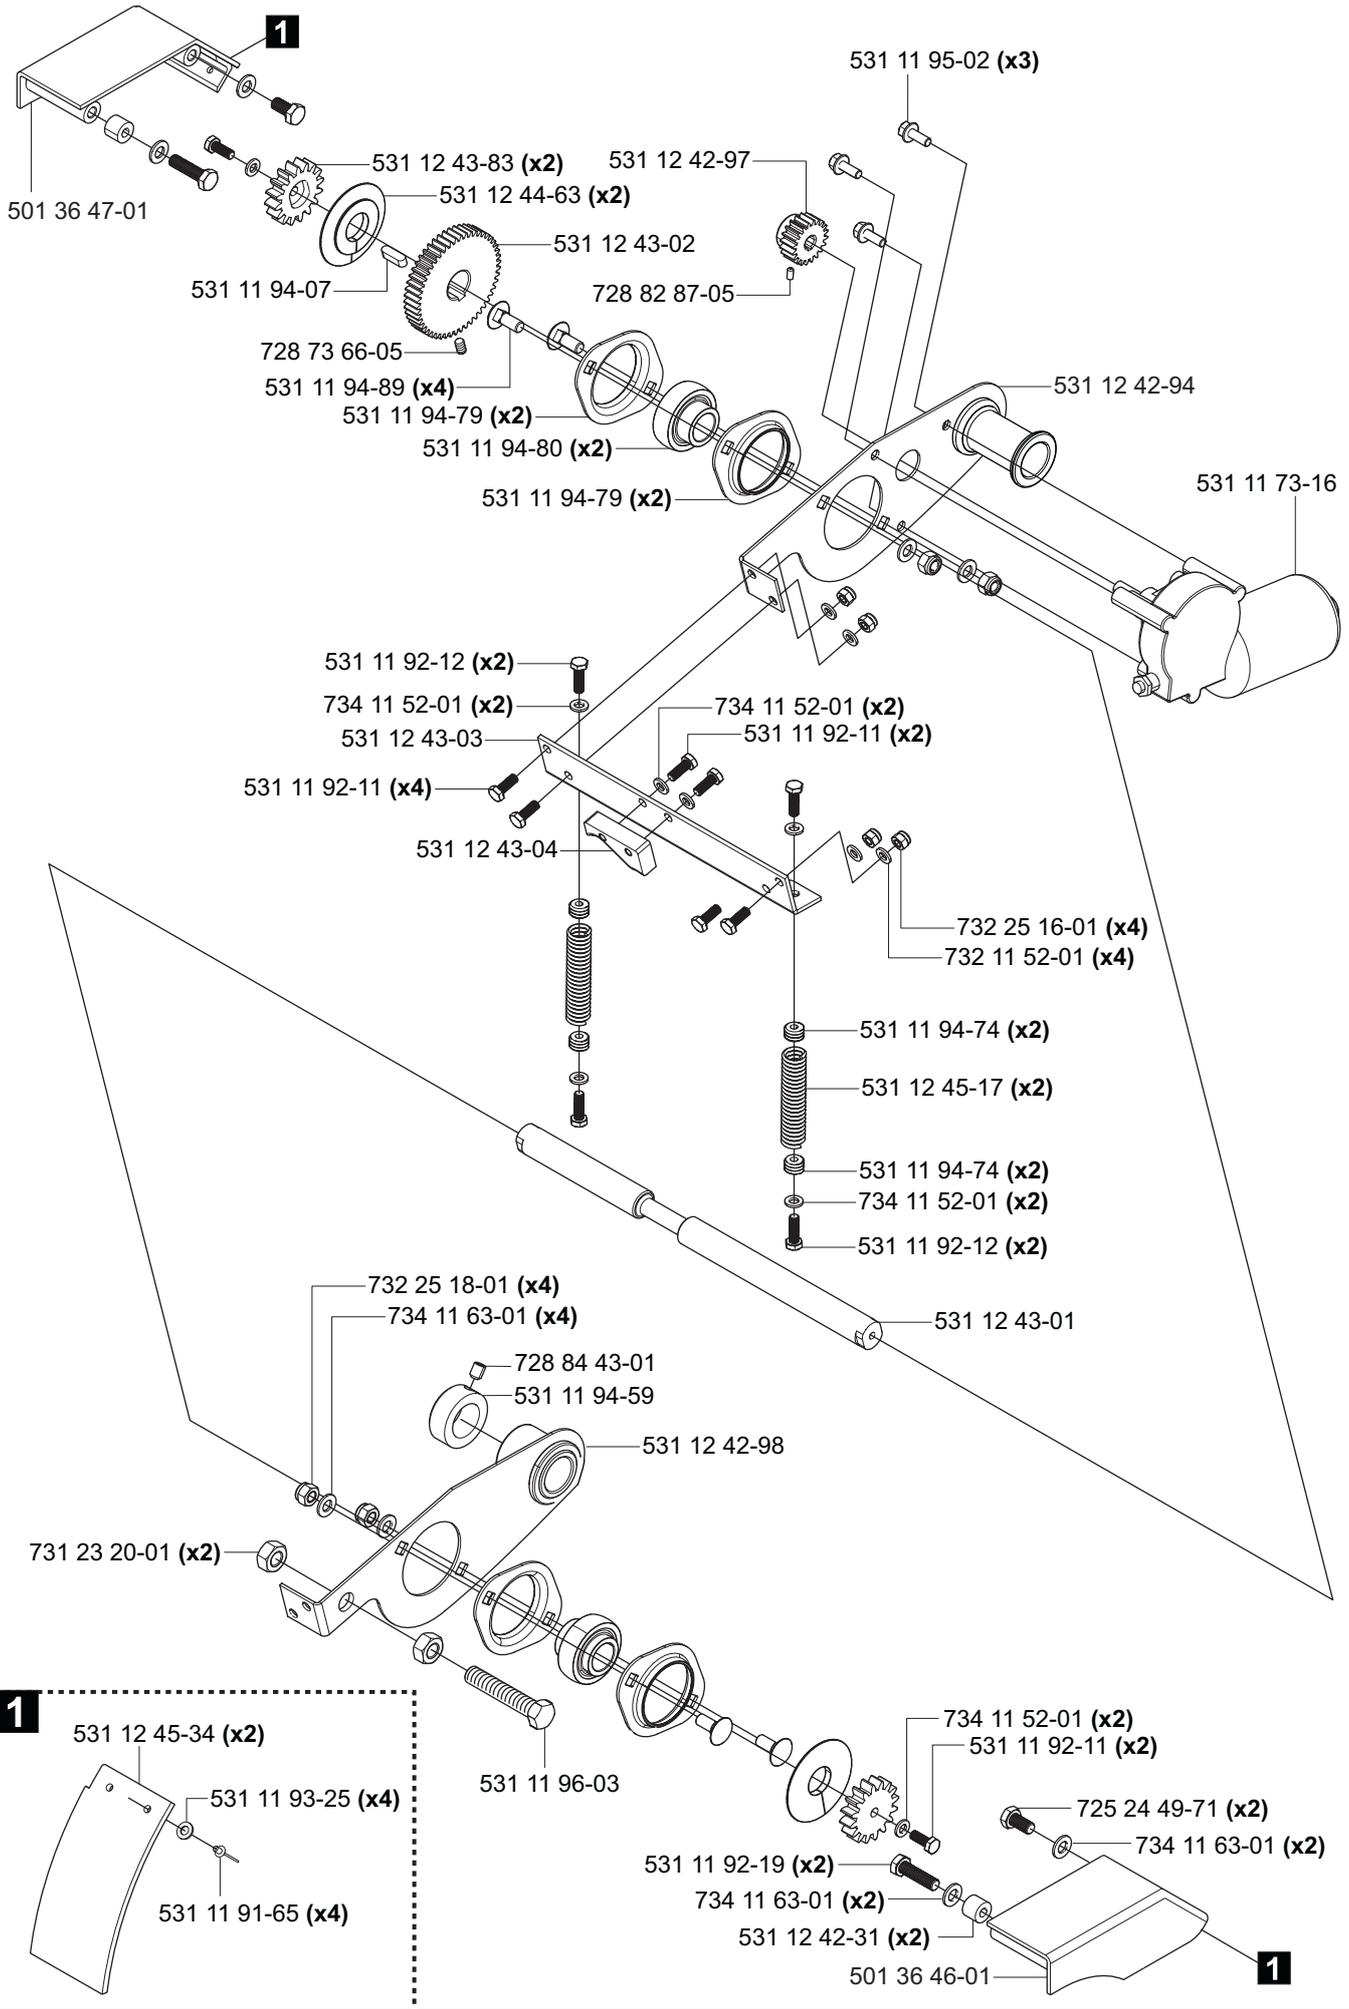

**N** FS 700 EX

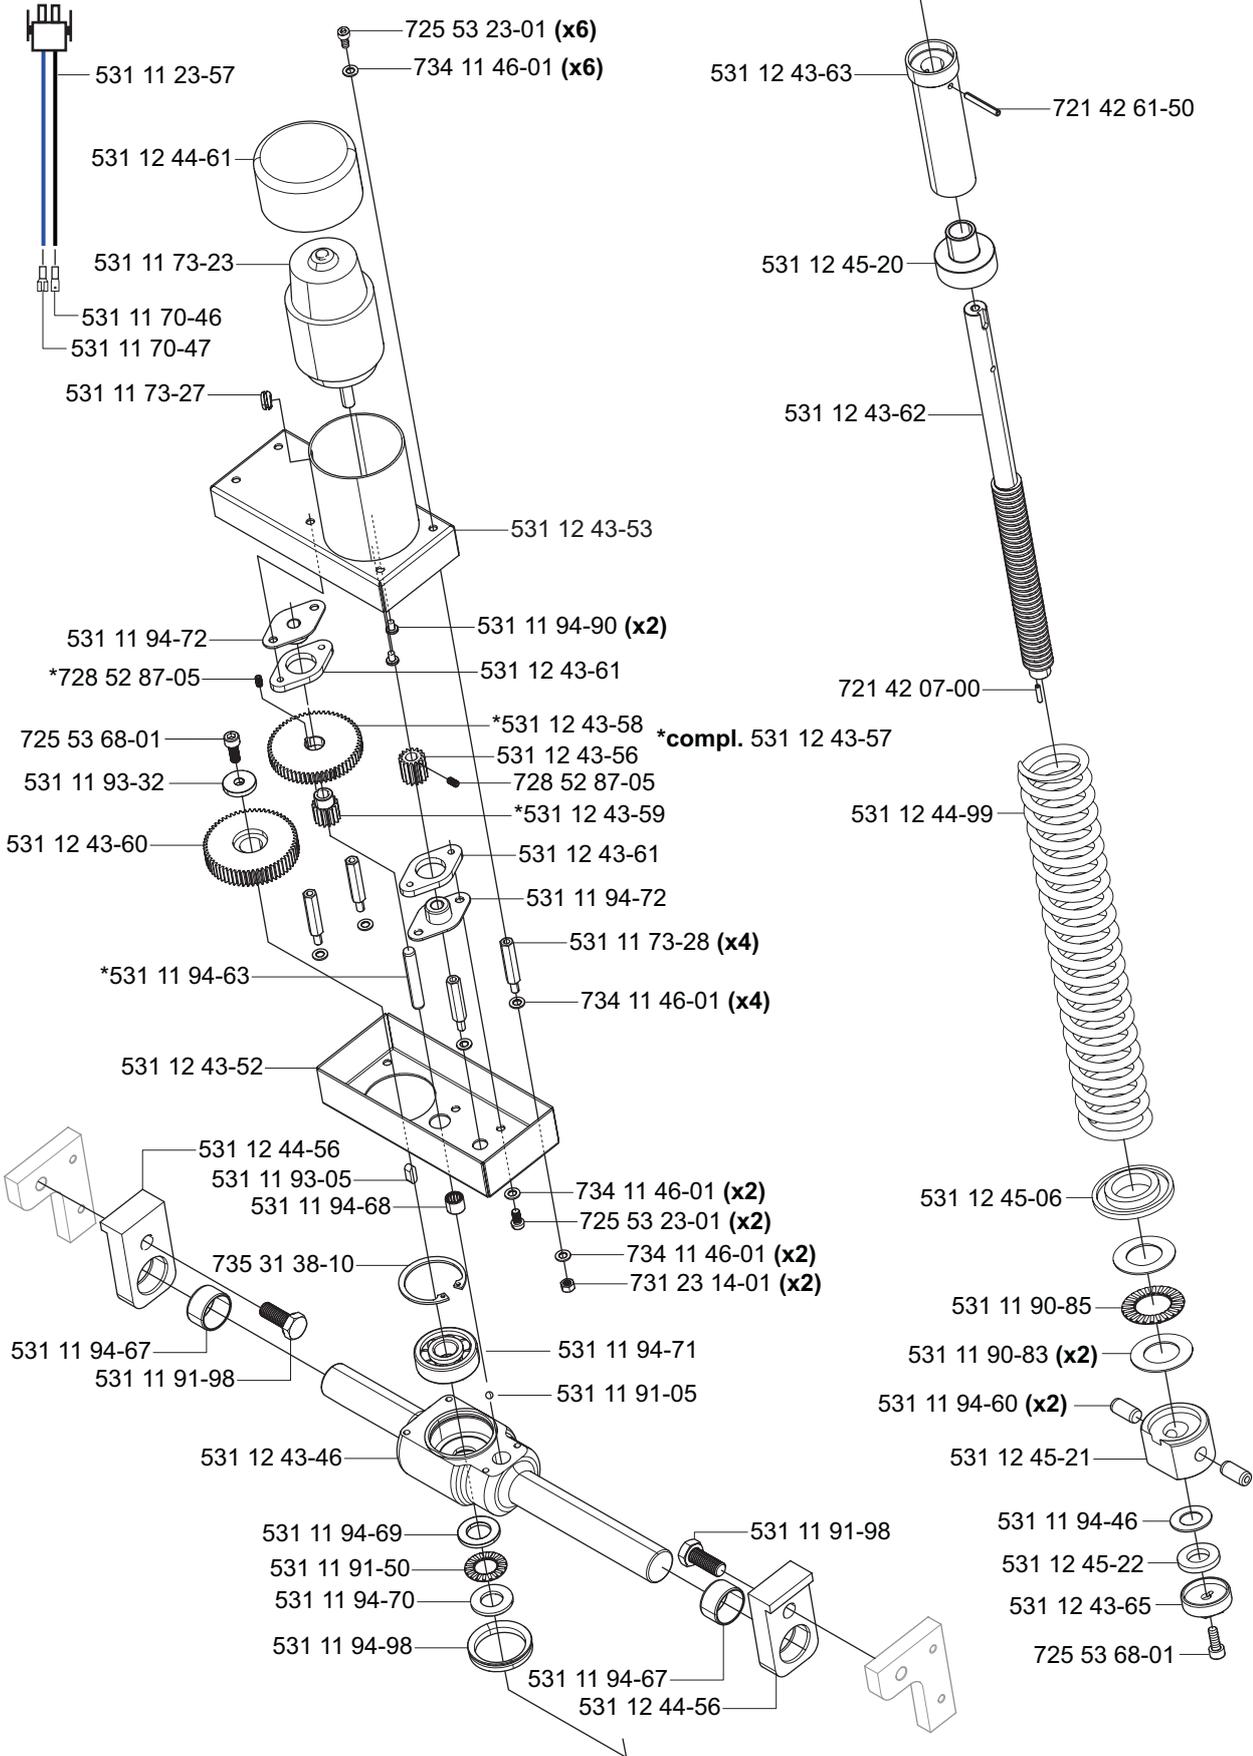

**P** FS 700 EX

**Electric box complete**

<b>400 V, 50 Hz</b>	531 11 23-37
<b>480 V, 60 Hz</b>	531 11 23-12
<b>600 V, 60 Hz</b>	531 11 23-34
<b>200 V, 60Hz</b>	531 11 23-46

**B**

<b>400 V, 50 Hz</b>	531 11 72-16
<b>480 V, 60 Hz</b>	531 11 73-42
<b>600 V, 60 Hz</b>	531 11 73-89
<b>200 V, 60Hz</b>	531 11 74-05

531 11 70-74  
**NOT ON 200V**

**B**

531 12 41-58

**C**

**C**

<b>400 V, 50 Hz</b>	531 11 72-35
<b>480 V, 60 Hz</b>	531 11 73-48
<b>600 V, 60 Hz</b>	531 11 73-88
<b>200 V, 60Hz</b>	531 11 71-85

731 23 14-01

734 11 46-01

**480V** 531 11 73-10 (2x)

**400V** 531 11 73-97

531 11 74-00

723 12 93-01 (x2)

723 12 20-01 (x3)

531 14 10-99




 

531 11 90-18 (x3)

531 12 44-47

734 11 52-01

531 11 92-10

531 11 90-16 (x4)

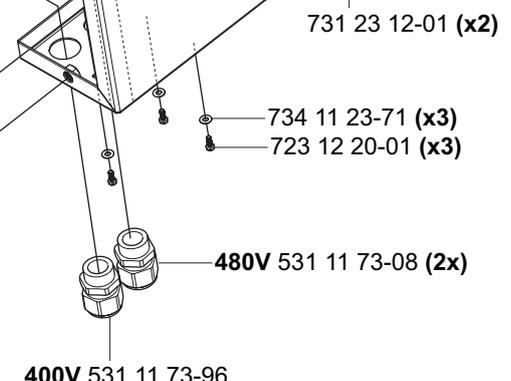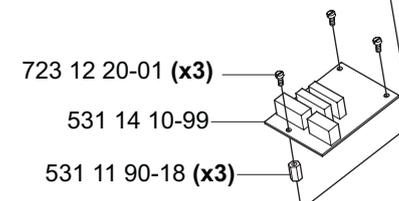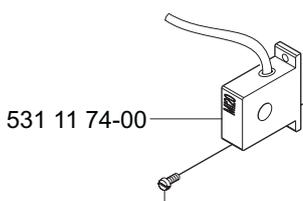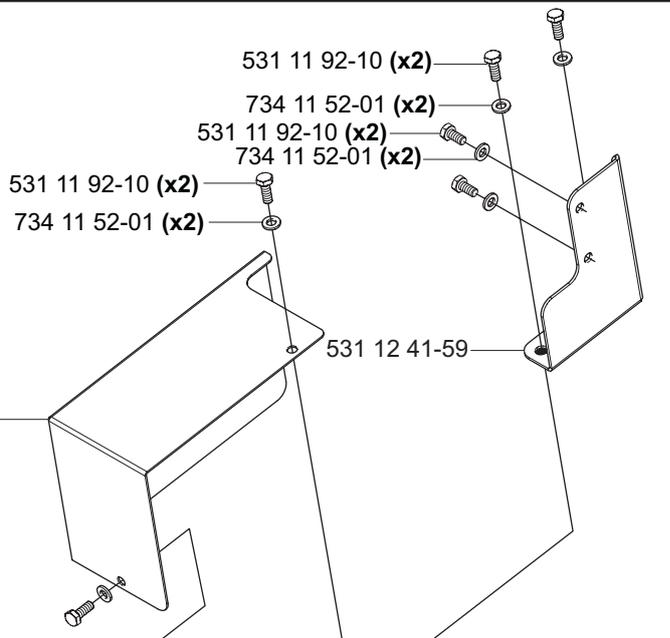

**A**

<b>400 V, 50 Hz</b>	531 11 23-18
<b>480 V, 60 Hz</b>	531 11 23-19
<b>600 V, 60 Hz</b>	531 11 23-35
<b>200 V, 60 Hz</b>	531 11 23-47

**FOR PART NO. ON OTHER ELECTRICAL COMPONENTS SEE WIRING DIAGRAM**

725 53 82-01 (x4)

**Q**

**FS 700 EX**

